NOTE: Wale can be in different angles
but the same practice is used.

STEP 1

Wale

Keep LPC 1'
below Wale

LAURENCO
PROTECTION COURSE

Pour or Shotcrete
at least 6" below
the Top of the
Second ply of W/P

Keep W/P
below Top
Edge of PC

Next lift of sheet.
Work off of shaffold.
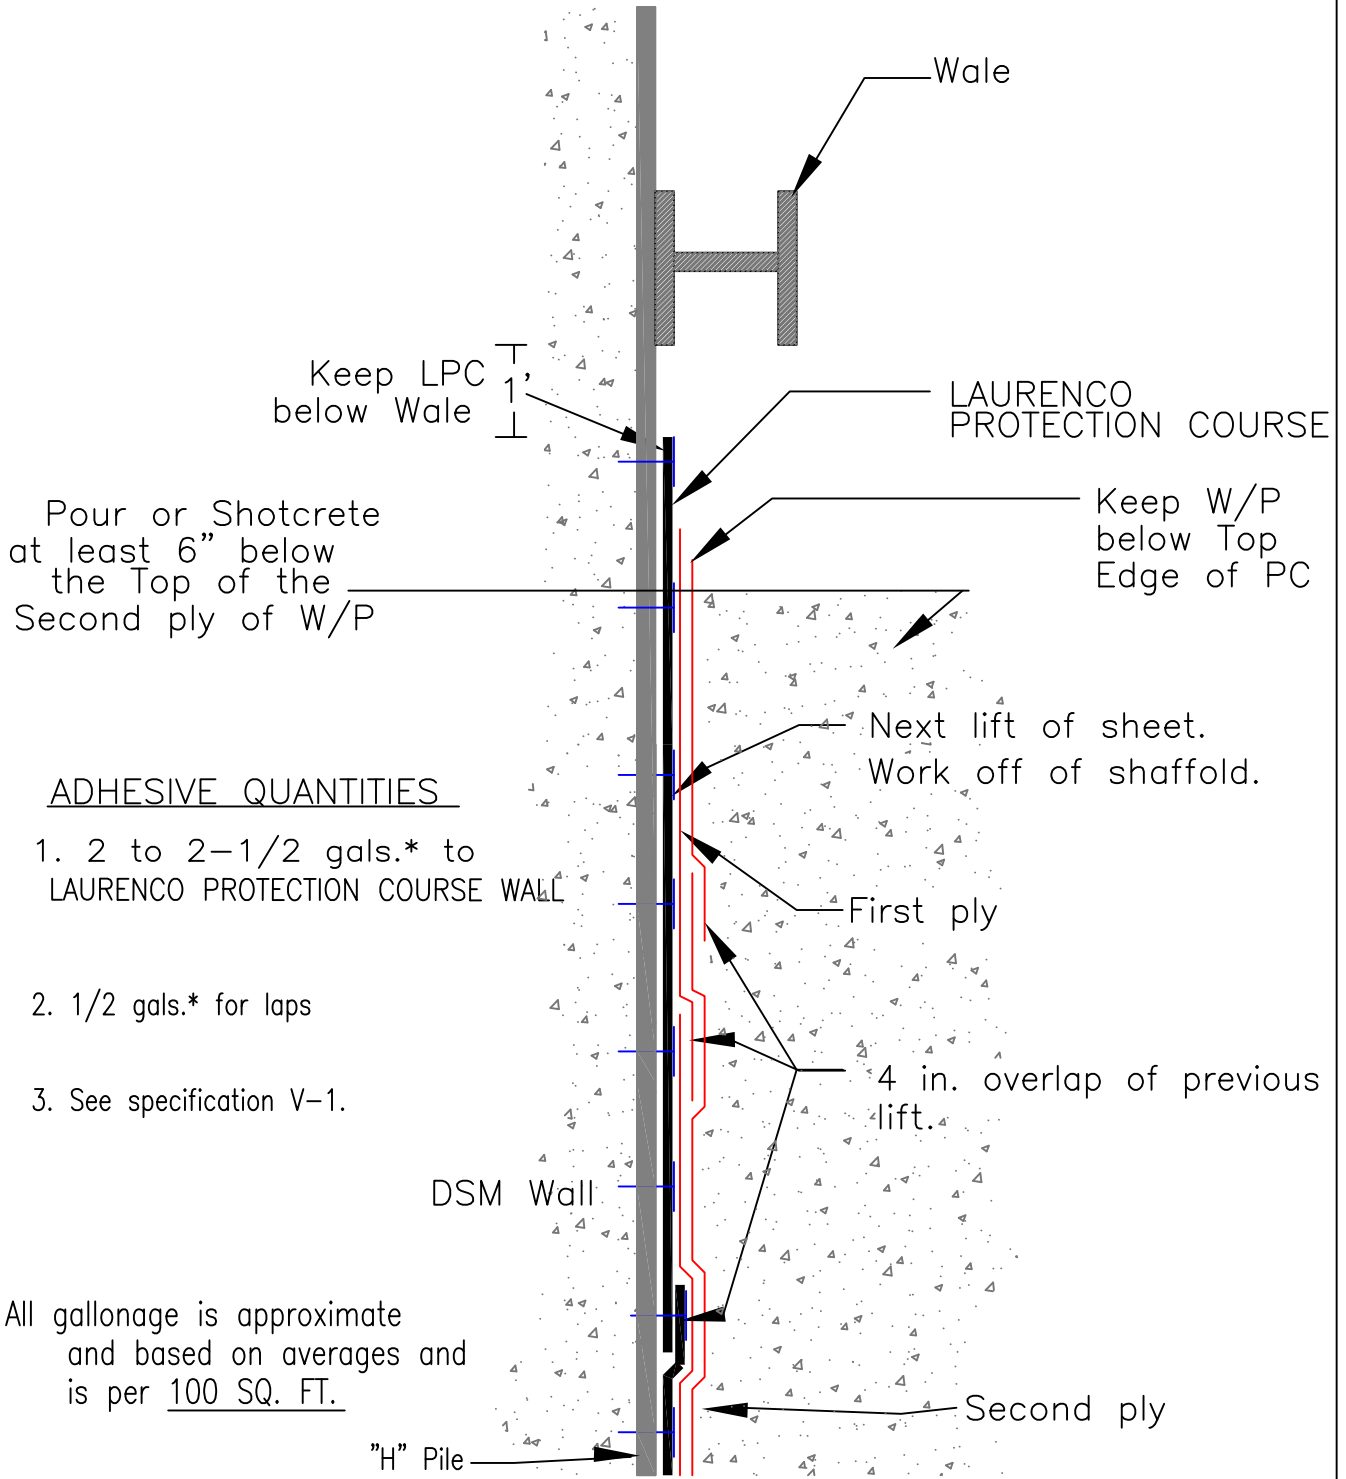
ADHESIVE QUANTITIES

1. 2 to 2-1/2 gals.* to
LAURENCO PROTECTION COURSE WALL

First ply

2. 1/2 gals.* for laps

3. See specification V-1.

4 in. overlap of previous
lift.

DSM Wall

* All gallonage is approximate
and based on averages and
is per 100 SQ. FT.

Second ply

"H" Pile

6000

2 PLY WALL APPLICATION OVER MECHANICALLY ATTACHED LPC